


BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

General Installation Guide

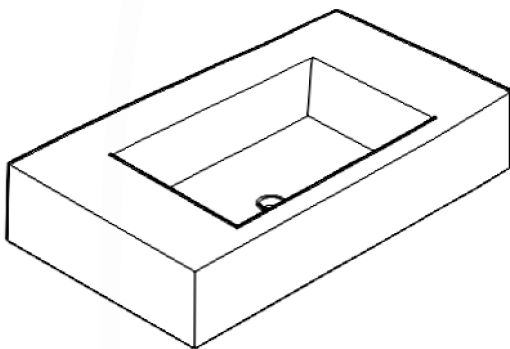

ALPINE COUNTERTOP/ WALLMOUNTED WASH BASIN

NOTE: for illustrative purposes only an 800mm wash basin is shown, please follow the same procedure to install the other Alpine products. wider basins may require an additional bracket

A member of SANIPEXGROUP

Please leave these instructions with the customer

IMPORTANT PLEASE READ

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and invalidate the guarantee.

The Installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

We strongly recommend that your product be installed by a reputable qualified trade's person.

General Installation:

Please note this product can require 2 or more persons to lift and manoeuvre into position.

To the installer: Please read and follow this instruction carefully, as the guarantee is only valid if the product is installed as directed.

Don't rush, read the instructions first and run through them before you begin. Keep fittings together to avoid loss. Do not over tighten screws or bolts.

If the unit is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.

Verify that all dimensions on the plan are the same as the ones of the product.

Please leave this installation manual with the end user once the product has been installed.

Product Aftercare:

We recommend cleaning with a soft damp cloth and mild soap solution.


Do not use cream cleaners or cleaners containing bleach.

Do not scrub or scour.

Do not use abrasive cleaning agents.


Do not use solvent based cleaners.

TOOLS REQUIRED (Not supplied)

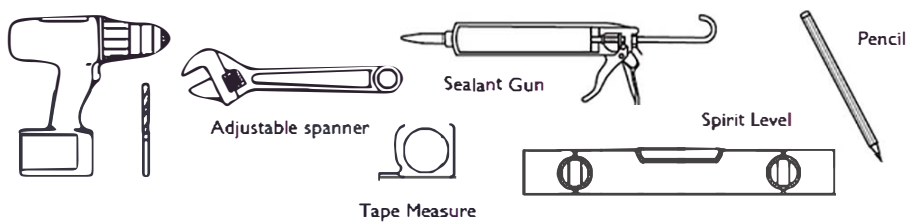


Drill and drill bits

Required when securing the wash basin to a wall. Use an appropriate size bit to match the wall fixing chosen (wall screws and fixings may not be supplied).

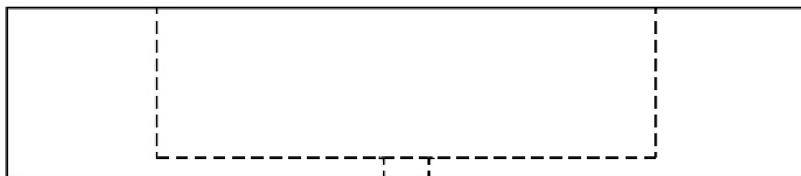


Remove the basin from its packaging carefully.


INSTALLATION

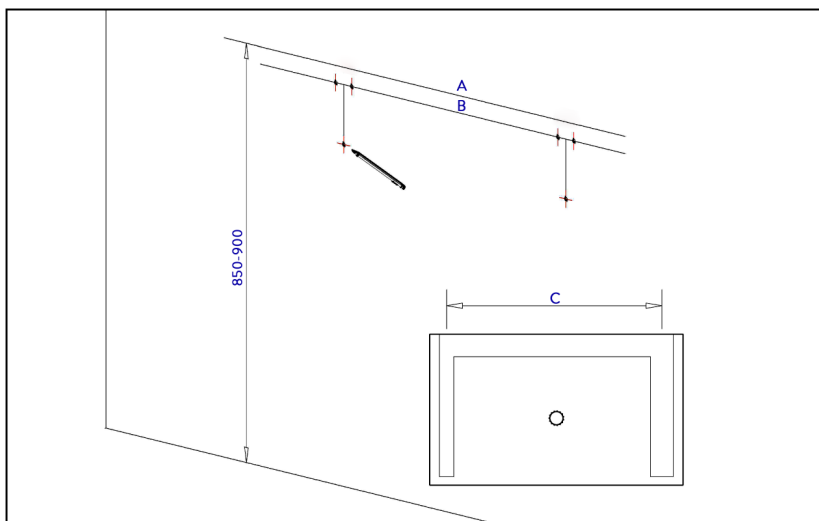


Mark a horizontal line at between 850-900mm for the height of the basin (A) subtract the depth of the basin and this will give the bracket height (B). Use the supplied basin to give you the dimension of the bracket width(C) mark the fixing hole using the bracket. Required 3 brackets for the long wash basins above 1200mm width.

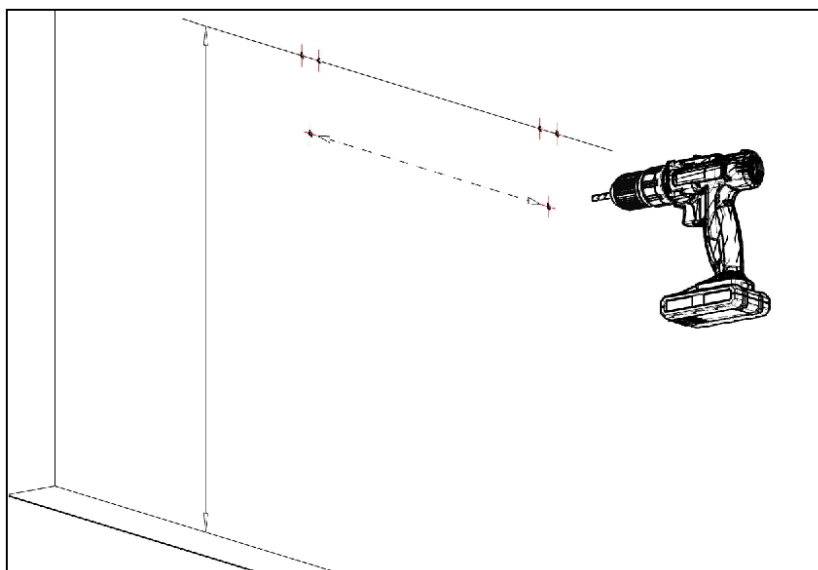


Drill the marked holes with the correct size drill bit for the plug. Insert the 6 plugs into the holes.

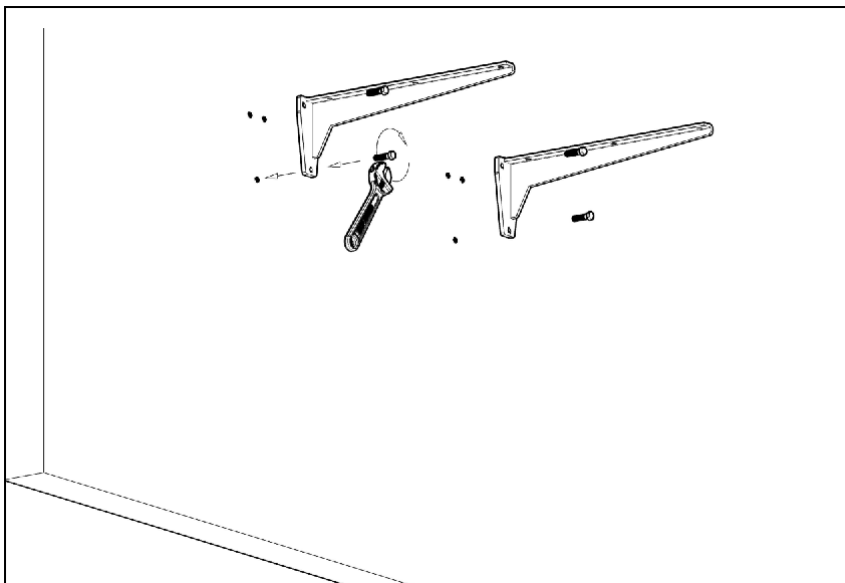


Fasten the the brackets to the wall using 6 screws.

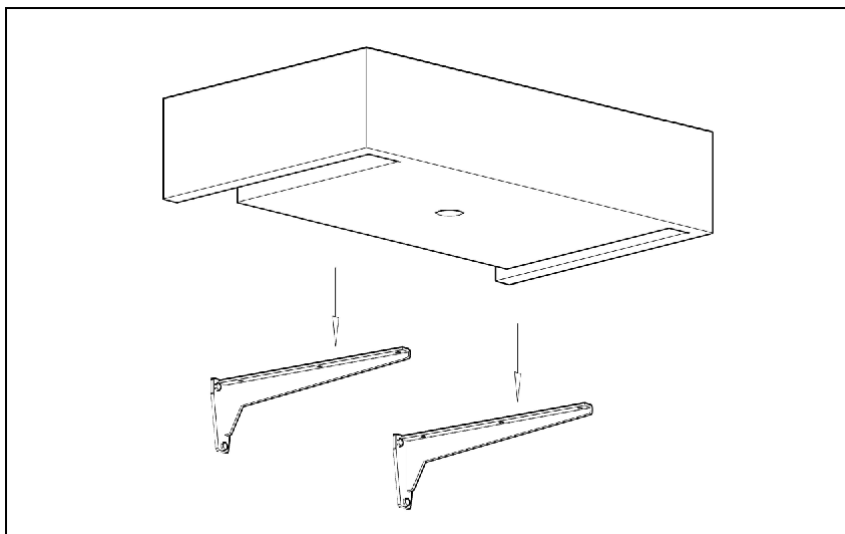

Place the basin o.nto the fixing brackets and ensure that they are aligned correctly.

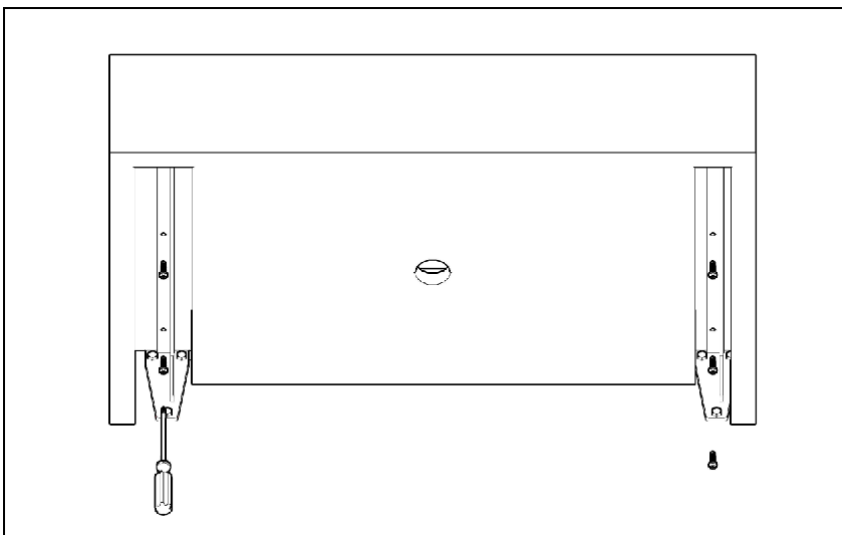

Using screws, secure the basin to the fixing brackets (screws not supplied).

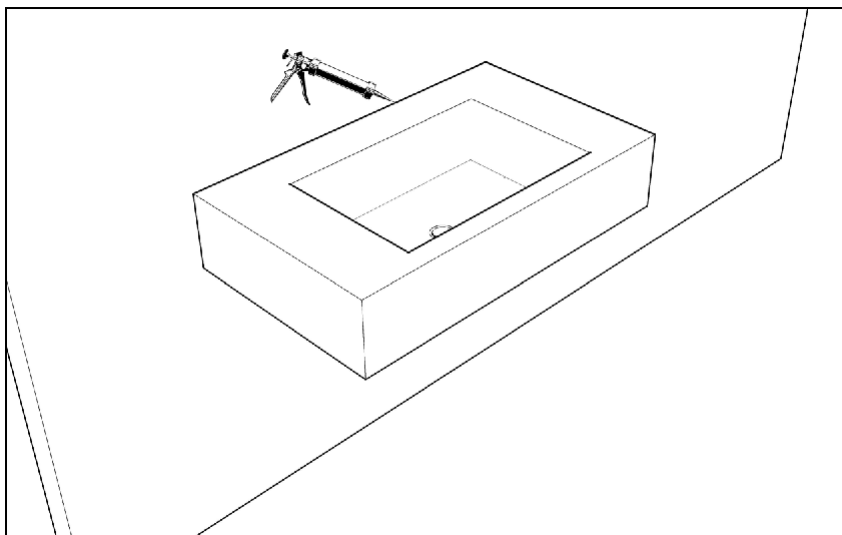

Apply silicon around the perimeter of the basin touching the wall

INSTALLATION COMPLETE!!!

BAGNODESIGN

EXPERTLY CRAFTED BATHROOMS

Oakwell Way, Birstall
Leeds, England WF9 17LU

A member of  SANIPEXGROUP